

4 STEPS TO JOINING ADJUSTASTAIRS

1

Reverse the feet on the bottom step of the stair to be used at the top of the batter. The flanges should be on the inside of the stair



2

Align the two stairs on their sides, with the top batter stair's feet aligned to the bottom batter stair's top step




3

Using the hardware provided, secure the nuts and bolts together with an impact wrench, socket, and/or spanner



4

Your stair is now ready!
Note: When positioning, the underside of the stairs at the join should rest on the support surface at all times.

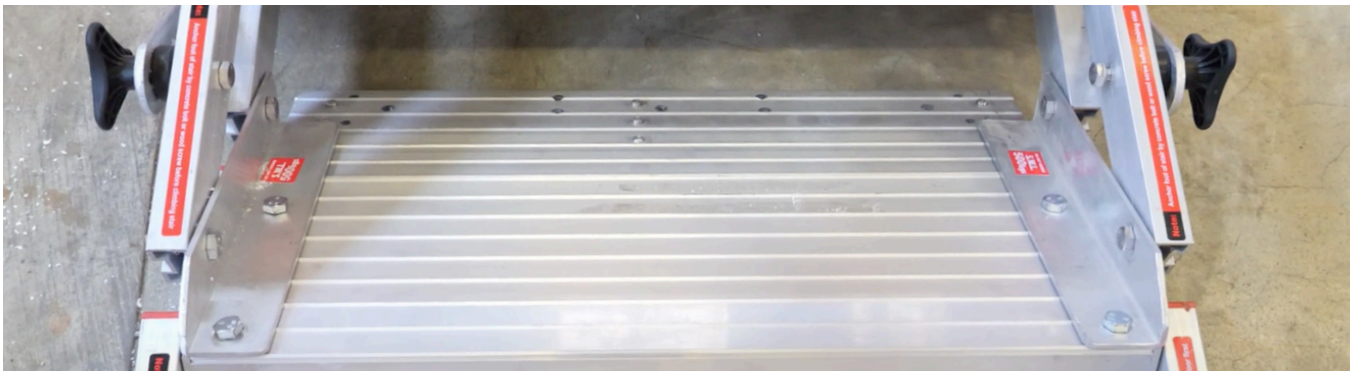

0845 382 1000
safesmartaccess.co.uk